

Thrustmaster Quick Reference

Accessing Menus:

1. At the top level menu, press "Change Selection" to toggle through the different menus:

- Menu Options
- Planet List
- Object List
- Take a Tour



The current selection is displayed near the bottom of the NexRemote UI.

2. Press "Select" to invoke the currently-displayed selection.



Thrustmaster Quick Reference

Gamepad Function	Description
Shift	Used in combination with another button to access another function.
Slew Up/Down/Left/Right	Moves the mount in all direction.
Enter	Equivalent to the Enter button on the hand control.
Align	Equivalent to the Align button on the hand control.
Undo	Equivalent to the Undo button on the hand control.
Info	Equivalent to the Info button on the hand control.
Rate Up	Increase the slew rate by 1.
Rate Down	Decrease the slew rate by 1.
Menu Up	Moves up in a list -- same as the 6 key.
Menu Down	Moves down in a list -- same as the 9 key.
Selection Up	Rotates through several options, including: <ul style="list-style-type: none"> · Menu Options · Planet List · Object List · Take a Tour
Select	Invokes the current selection (one of the items in the list above).
Tour Up	Moves forward through the available tours.
Tour Down	Moves backwards through the available tours.